

Operating Manual

Freezer Counter Model HAJO 2100 BT, 3100 BT, 4100 BT

Item-No.: 323-1077, 323-1078, 323-1079



TABLE OF CONTENTS

SCOPE OF DELIVERY	3
STANDARDS AND DIRECTIVES	3
TECHNICAL OVERVIEW	4
SYMBOL EXPLANATIONS	5
GENERAL INSTRUCTIONS	6
SAFETY INSTRUCTIONS.....	7
DEVICE INSTALLATION.....	8
ELECTRICAL CONNECTION.....	8
STRUCTURE AND COMPONENTS	9
INITIAL START-UP.....	9
OPERATION – SETTINGS	10
CLEANING.....	11
MAINTENANCE	11
TAKING COOLING CABINET OUT OF OPERATION / STORAGE / TRANSPORT.....	11
TROUBLESHOOTING	12
WIRING DIAGRAM.....	13
EXPLODED VIEW: 323-1077 HAJO 2100 BT	14
EXPLODED VIEW – LEGEND: 323-1077 HAJO 2100 BT	15
EXPLODED VIEW: 323-1078 HAJO 3100 BT	17
EXPLODED VIEW – LEGEND: 323-1078 HAJO 3100 BT	18
EXPLODED VIEW: 323-1079 HAJO 4100 BT	20
EXPLODED VIEW – LEGEND: 323-1079 HAJO 4100 BT	21
PACKAGING DISPOSAL	23
DEVICE DISPOSAL	23

Dear Customer,

We congratulate you on your new SARO freezer counter.

The product you have purchased has been designed for commercial use in restaurants, hotels, cafés, canteens, and supermarkets.

It is intended for the reliable deep-freezing and safe storage of food products. The freezer table is particularly suitable for space-saving storage of ingredients directly beneath the work surface, allowing for efficient workflow in professional kitchens.

Please read this operating manual carefully before putting the appliance into operation.

We wish you much success and satisfaction with your new SARO product.

SCOPE OF DELIVERY

- 1 freezer counter
- 2 (2100 BT), 3 (3100 BT) or 4 (4100 BT) racks
- 1 operating manual

STANDARDS AND DIRECTIVES

The device complies with the current EU standards and directives:

Machinery Directive – MD 2006/42/EC,

Electromagnetic Compatibility Directive – EMC 2014/30/EU,

RoHS Directives 2011/65/EU and 2015/863/EU,

Ecodesign requirements according to Regulation (EU) 2015/1095, and

Energy Labelling according to Regulation (EU) 2015/1094.

The corresponding Declaration of Conformity can be provided upon request.

TECHNICAL OVERVIEW

Freezer counter			
Model	HAJO 2100 BT	HAJO 3100 BT	HAJO 4100 BT
Order No.	323-1077	323-1078	323-1079
Material	Housing and interior: Stainless steel Worktop: Stainless steel		
Door(s)	2, self-closing	3, self-closing	4, self-closing
Lock	None		
Shelves	2 height-adjustable shelves 2 support rail sets	3 height-adjustable shelves 3 support rail sets	4 height-adjustable shelves, 4 support rail sets
On/Off switch	Yes		
Connection setup	Ready top lug in with Schuko plug		
Temperature control	Digital temperature control (DIXELL)		
Insulation	60 mm		
Cooling type	Forced-air cooling		
Defrosting	Automatic		
Feet	4 height-adjustable	6 height-adjustable	
Temerperature range	-10/-20 °C		
Shelf size	W 335 x D 530 mm		
Gross capacity	205 litres	358 litres	476 litres
Climate class	Suitable for climate class 4, standard appliance		
Refrigerant type/quantity	R290 (GWP 3) / 0,090 kg 	R290 (GWP 3) / 0,090 kg 	R290 (GWP 3) / 0,090 kg 
Connection	230 V / 50 Hz / 0,470 kW	230 V / 50 Hz / 0,570 kW	230 V / 50 Hz / 0,660 kW
Internal dimensions	W 795 x D 580 x H 560 mm	W 1230 X D 580 X H 560 mm	W 1665 x D 580 x H 560 mm
External dimensions	W 1360 x D 700 x H 890-950 mm	W 17950 x D 700 x H 890-950 mm	W 2230 x D 700 x H 890-950 mm
Regulation for energy labeling	VO (EU) 2015/1094 – Commercial Refrigerated Storage Cabinets Group: Counter Freezers		
Energy efficiency class/ EEI	D (Spektrum A+++ bis E) / 61,10 % 	D (Spektrum A+++ bis E) / 73,70 % 	E (Spektrum A+++ bis E) / 83,40 % 
Energy consumption per year/day	2121 kWh / 5,81 kWh	2960 kWh / 8,11 kWh	3898 kWh / 10,68 kWh
Net/Gross weight	103 / 118 kg	136 / 154 kg	155 / 173 kg
GTIN [EAN-Code]	4017337323364	4017337323326	4017337323371

SYMBOL EXPLANATIONS



WARNUNG!

Dieses Symbol kennzeichnet Gefahren, die zu Verletzungen führen können. Halten Sie die angegebenen Hinweise zur Arbeitssicherheit unbedingt genau ein und verhalten Sie sich in diesen Fällen besonders vorsichtig.

WARNING!

This symbol indicates hazards that may cause injuries. Always follow the specified safety instructions precisely and exercise extra caution in these situations.



WARNUNG: GEFAHR DURCH ELEKTRISCHEN STROM!

Dieses Symbol macht auf gefährliche Situationen durch elektrischen Strom aufmerksam. Bei Nichtbeachten der Sicherheitshinweise besteht Verletzungs- oder Lebensgefahr!

WARNING: DANGER OF ELECTRIC SHOCK!

This symbol warns of hazardous situations caused by electric current. Failure to follow the safety instructions may result in injury or death!



WARNUNG: HEISSE OBERFLÄCHE - VERBRENNUNGSGEFAHR

Dieses Symbol weist auf die heiße Oberfläche des Gerätes, während des Betriebes und danach hin. Verletzungs- oder Lebensgefahr bei Nichtbeachten!

WARNING: HOT SURFACE - RISK OF BURNS

This symbol indicates the hot surface of the device during and after operation. Risk of burns if not observed!



WARNUNG: FEUERGEFÄHRLICHE STOFFE - VERBRENNUNGSGEFAHR

Dieses Symbol weist darauf hin, dass Gefahren aufgrund von feuergefährlichen Stoffen für Leben und Gesundheit von Personen bestehen. Verletzungs- oder Lebensgefahr bei Nichtbeachten!

WARNING: FLAMMABLE SUBSTANCES - RISK OF BURNS

This symbol indicates that flammable substances pose a danger to life and health. Risk of burns if not observed!

GENERAL INSTRUCTIONS

- Keep this operating manual handy near the appliance.
- The manufacturer/dealer cannot be held responsible for any damage resulting from failure to follow this manual.
- Failure to follow this manual will void the safety of the appliance.
- If the appliance is passed on to third parties, this operating manual must be included.
- This appliance must not be operated by children or persons with reduced physical, sensory, or mental capabilities, as they may not recognize the hazards of using electrical and/or refrigeration appliances, which could lead to accidents, fire, explosions, or property damage.
- After unpacking the appliance, make sure everything is in perfect condition. If you discover any damage, do not connect the appliance to the power supply; instead, contact your dealer.
- Check whether all components listed in the scope of delivery are present. If not, contact your dealer.
- Keep the appliance packaging. Only in its original packaging can the appliance be transported safely (e.g. for repair purposes, during relocation, etc.). Please note that all packaging components (plastic bags, cardboard, styrofoam parts, etc.) can be dangerous for children and must not be stored within their reach.
- If storing the packaging is not possible, separate the different packaging materials and take them to the nearest collection point for proper disposal.
- Do not use the appliance outdoors in the rain or in damp rooms.
- Do not operate the appliance unattended.
- Observe applicable accident prevention regulations and general safety standards for the area of use.
- Install the appliance in a dry, well-ventilated location on a level, stable surface.
- Ensure at least 10 cm of clearance between the rear of the display cabinet and the wall. Otherwise, the required cooling performance cannot be guaranteed.
- Do not install the appliance near heat sources such as heaters, stoves, ovens, open flames, or in direct sunlight, as this will affect the cooling performance.
- Ventilation slots must always be kept clear and must not be covered or obstructed.
- Before commissioning, observe the recommended ambient temperatures (climate class) for optimal cooling performance.
- Before connecting to the power supply and before commissioning, clean the appliance thoroughly as described under "Cleaning."
- Before connecting the appliance, make sure that a grounded socket (Schuko) with 230 volts is available and that this matches the information on the rating plate. Power sources other than those indicated on the rating plate may cause overheating or defects in the appliance.
- Do not drill or pierce holes in the interior or exterior of the appliance, as this could damage the cooling system.
- For hygiene reasons, daily cleaning is recommended during operation.
- Always disconnect the appliance from the power supply before cleaning. Switch off the appliance first if it has an on/off switch or a thermostat with an "off" setting. Do the same if the appliance is not used for an extended period.
- The manufacturer/dealer cannot be held responsible for any damage resulting from failure to follow this manual. The safety of the appliance will also no longer be guaranteed.
- In the event of a malfunction/failure, disconnect the appliance from the power supply and contact your dealer. Repairs will be carried out with original spare parts by or on behalf of the dealer.

SAFETY INSTRUCTIONS

- Improper use and mishandling can lead to malfunctions of the appliance and injuries to the user.
- This appliance is neither suitable nor intended for storing medicines or flammable, combustible, or explosive substances.
- Observe the applicable accident prevention regulations and general safety standards for the area of use.
- Ensure a stable position on a dry, slip-resistant surface suitable for the appliance's weight, and install it in a well-ventilated location.
- Do not expose the appliance to direct sunlight, do not place it near heat sources (heater, stove, oven, open fire), and do not place it on hot surfaces, as this will affect cooling performance.
- Do not store flammable or explosive substances near the appliance.
- Do not carry out work with flammable substances near the appliance (such as paint or spray paint). Otherwise, fire or explosion may occur.



- The appliance requires sufficient space for air circulation and cooling: 10 cm on each side and at the back.
- Do not place heavy objects, loads, or liquids on the appliance.
- Ensure that the appliance's air inlet and outlet openings are always free of dirt. Check them regularly and remove any dust deposits using a vacuum cleaner.
- Do not cover or block the air openings.
- Do not tilt the appliance more than 45 degrees.
- Before connecting to your power supply, check whether the type of current and mains voltage correspond to the information on the rating plate. Operation is only possible if they match, in order to avoid accidents or defects.



- Do not use adapters, multiple sockets, or extension cords; otherwise, cables/wires may quickly overheat, especially if other appliances are connected. This increases the risk of fire.
- Do not move the appliance while it is in operation.
- Before moving the appliance, switch it off (if a switch is available) and unplug it.
- Always unplug by pulling on the plug housing, never the cable.
- Make sure the appliance does not tip over when being moved, as this may cause injuries.
- Once the appliance is set up again, wait 2 hours before switching it back on.
- If transported over a longer distance, allow the appliance to stand for approx. 24 hours before commissioning to prevent damage or accidents.
- After a power failure or after unplugging briefly, switch the appliance off, wait 5 minutes, then plug it back in and restart it.
- Do not let the power cord hang over sharp edges, do not crush it, and keep it away from hot objects and open flames.
- Ensure the cord cannot be pulled accidentally or tripped over.
- Check the cord regularly. If damaged, e.g. crushed, it must be replaced by a qualified technician.
- Do not touch the appliance, cord, or plug with wet or damp hands.
- Caution! The appliance remains live as long as it is connected to the mains.
- Protect the appliance from moisture.
- Do not clean the appliance with a water jet.
- The appliance must not be immersed in water or other liquids or splashed with liquids. If the appliance does get wet, unplug it immediately and have it inspected by a qualified technician before reuse. Danger of electric shock!



- A damaged appliance must not be used! Disconnect it from the mains and contact your dealer.
- Never attempt to open or repair the appliance yourself. Danger to life!
- Do not touch the compressor, as it may cause burns.
- Do not drill or puncture the appliance, neither from outside nor inside.
- Do not install other devices in the refrigeration unit and do not attach foreign objects.
- Do not interfere with the refrigeration circuit! This must only be done by a professional. Refrigerants R600a and R290 are environmentally friendly, but they are colorless, almost odorless, flammable gases; heavier than air; and in high concentrations narcotic and asphyxiating.
- Repairs must be carried out by qualified personnel using original spare parts.
- Always disconnect the appliance from the mains before cleaning and also during longer periods of non-use.
- Keep the door open only briefly to maintain the internal temperature.

DEVICE INSTALLATION

Place the appliance in a dry and well-ventilated room. Ensure a stable position on a dry, slip-resistant surface.

Position the appliance at least 10 cm away from the wall at the back to allow sufficient air circulation at all times. Leave at least 30 cm of space above the appliance and 10 cm on each side.

Performance and energy consumption may be affected by ambient temperature or direct sunlight. Therefore, do not expose the appliance to direct sunlight and do not place it near a stove, radiator, or any other heat source.

Ensure that the power plug is always easily accessible and can be disconnected from the mains without difficulty.

Arrange the appliance's shelves so that the spacing corresponds to the height of your stored goods.



After delivery or transportation of the appliance, do not connect it to the power supply until it has been left to stand for at least 24 hours. This is absolutely necessary to allow the refrigerant to settle in the compressor.

ELECTRICAL CONNECTION

After long transportation, the appliance should only be put into operation after 24 hours, and likewise after being strongly tilted. This allows the refrigeration circuit to stabilize and the refrigerant to redistribute evenly, preventing defects or malfunctions. After short movement or tilting of less than 45 degrees, please wait 2 hours before connecting the appliance.


Before connecting the appliance, make sure that the voltage and frequency of the power supply match the information on the rating plate! Using a different voltage may cause the appliance to overheat.

Connect the appliance only to a grounded socket with protective contact and a 230-volt connection.

Once the appliance is connected, wait about one hour to allow the interior to cool down sufficiently before loading it with goods. After a power failure or if the appliance has been disconnected from the mains, wait at least 5 minutes before reconnecting and restarting the appliance!

If the appliance is restarted immediately after being switched off, the fuse may trip and interrupt the power supply. In addition, the compressor may become overloaded and damaged.

STRUCTURE AND COMPONENTS

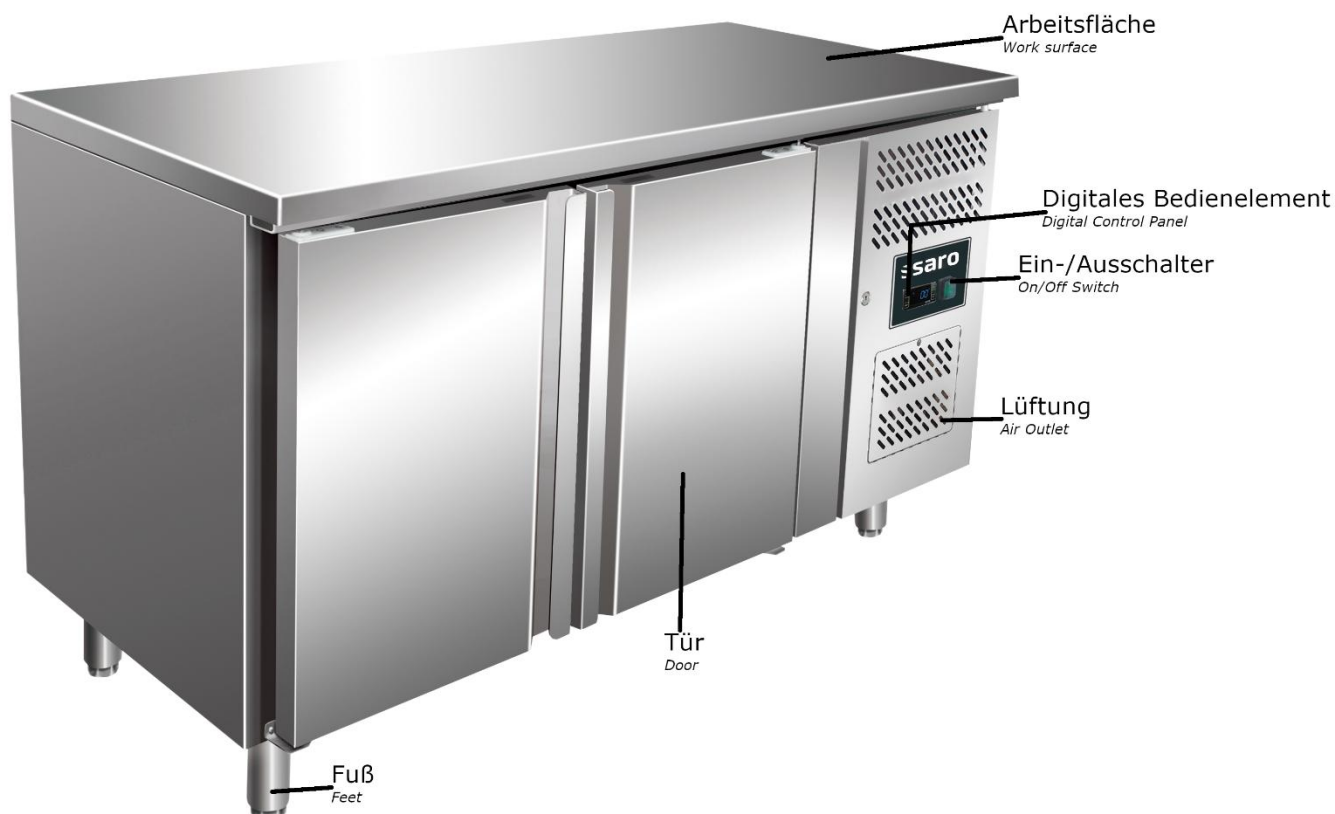

INITIAL START-UP

Before first use:

Unpack the appliance, check it for completeness, and set it up (see *Installation*). Clean the appliance (see *Cleaning*).

Connect the cleaned refrigeration unit (see *Electrical connection*) to a 230 V socket.

Only once the desired temperature has been reached (place your hand on the air intake to ensure it is sufficiently cold), load the appliance with your goods.

OPERATION – SETTINGS



1. Switching on

- Plug in the power cord.
- Set the power switch to [I].
- The appliance will display the current temperature.

2. Unlocking / Locking the control panel

- **Press the ▲ and ▼ keys simultaneously for 3 seconds.**
- The display shows:
 - PON (unlocked)
 - POF (locked)

3. Setting the operating temperature

1. Press the SET key → the display starts flashing.
2. Use ▲ or ▼ to set the desired temperature.
3. Press the SET key again to save.

4. Manual defrosting

- Press and hold the AUX key for 2 seconds.
- The defrost indicator light illuminates → defrost cycle active.

CLEANING

Wipe the exterior and interior surfaces with a damp, soft cloth.

A mild dishwashing detergent may be used.

Wipe again with clean water (without detergent), then dry thoroughly.

The glass shelves can be removed for easier cleaning; clean them in the same way.

Do not use harsh, bleaching, caustic, or abrasive cleaning agents/tools, as these may damage or scratch the surfaces.

For the glass surfaces, a standard glass cleaner and a soft cloth may also be used. However, ensure that only the glass is moistened and that no large amounts of liquid run into the cabinet.

MAINTENANCE

The refrigeration unit requires very little maintenance. Approximately every 2 months, check the ventilation slots for dirt. Brush them off with a soft brush while simultaneously removing the dirt with a vacuum cleaner.

TAKING COOLING CABINET OUT OF OPERATION / STORAGE / TRANSPORT

Remove all food, switch off the appliance, and unplug it.

Clean the appliance thoroughly inside and outside, then leave the door open to allow sufficient drying.

If the appliance is dry and will not be used for an extended period, store it in a dry, dust-free, and cool place. Ideally, cover the appliance or use the original packaging to protect it from damage.

Ensure the appliance is secured against children or pets climbing inside, as this could result in entrapment.

If only the packaging materials are stored, please note that components such as plastic bags, cardboard, and styrofoam parts can be dangerous for children if they play with them unsupervised (e.g., risk of suffocation).

For transportation, use the original packaging to optimally protect the appliance against shocks, sharp edges, weather conditions, etc. Do not tilt the appliance more than 45 degrees, do not expose it to moisture or rain, and avoid heavy impacts.

After transportation, the appliance must stand still for approx. 24 hours before being reconnected. Otherwise, malfunctions may occur, as the refrigerant and oil need time to redistribute and settle correctly.

TROUBLESHOOTING


Problem	Cause and Solution
The unit does not work	- Make sure the plug is correctly inserted into the socket - Check the power cable. If it is damaged, it must be replaced by qualified technician
The required temperature is not reached	- Ensure that the main switch is turned on - Set the temperature correctly. - The unit may be in a defrosting phase or has just completed one - The evaporator is covered with frost – completely defrost the unit - The condenser is blocked with dust – clean the condenser - The unit is located near heat sources or the ambient temperature limit has been exceeded – remove heat sources - Ensure sufficient ventilation off the condenser - Doors or drawers do not close properly – check for food or objects blocking the seal, clean gaskets and remove obstructions - The unit is overloaded, filled with hot food, or air circulation is obstructed – ensure proper loading
The unit leaks water	- Drain openings are blocked – clean and unblock the drain - The unit is not level or has not been properly aligned – level the unit
The unit is excessively noisy	- Check whether all screws and bolts are tightened – retighten is necessary - The unit is not positioned correctly or stands unevenly – adjust and align properly.
If the problem cannot be solved by these simple troubleshooting steps, please contact your dealer.	

The following are not malfunctions:

The sound of running water may be heard when the refrigeration unit is operating. This is normal, as the refrigerant is circulating within the system.


During damp weather, condensation may form on the outside of the appliance. This is not a malfunction; the cause is high humidity. Simply wipe off the condensation with a cloth

WIRING DIAGRAM

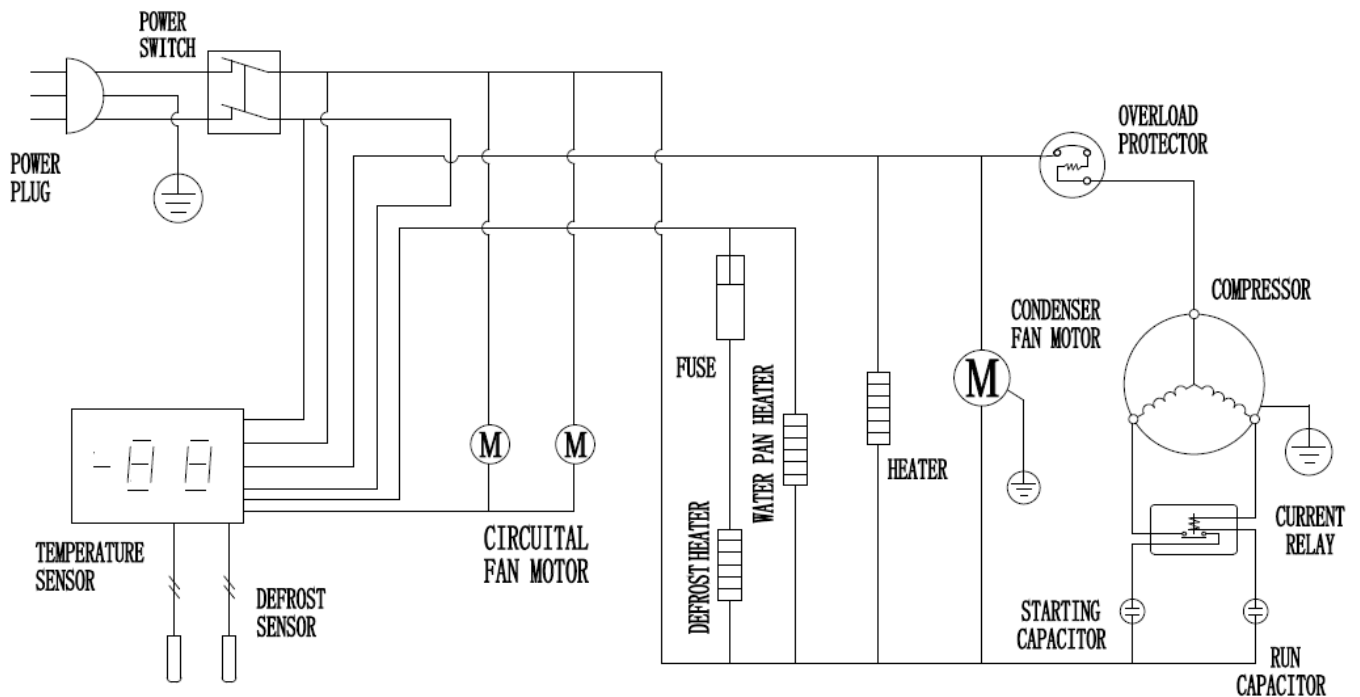

Englischer Begriff	Deutscher Begriff
Power Plug	Netzstecker
Power Switch	Netzschalter
Temperature Sensor	Temperatursensor
Defrost Sensor	Abtausensor
Circuitual Fan Motor	Umluftventilator-Motor
Fuse	Sicherung
Defrost Heater	Abtauheizung
Water Pan Heater	Wasserwannenheizung
Heater	Heizung
Condenser Fan Motor	Verflüssigerlüfter-Motor
Compressor	Kompressor
Overload Protector	Überlastschutz
Current Relay	Anlaufrelais
Starting Capacitor	Anlaufkondensator
Run Capacitor	Betriebskondensator

EXPLODED VIEW: 323-1077 HAJO 2100 BT

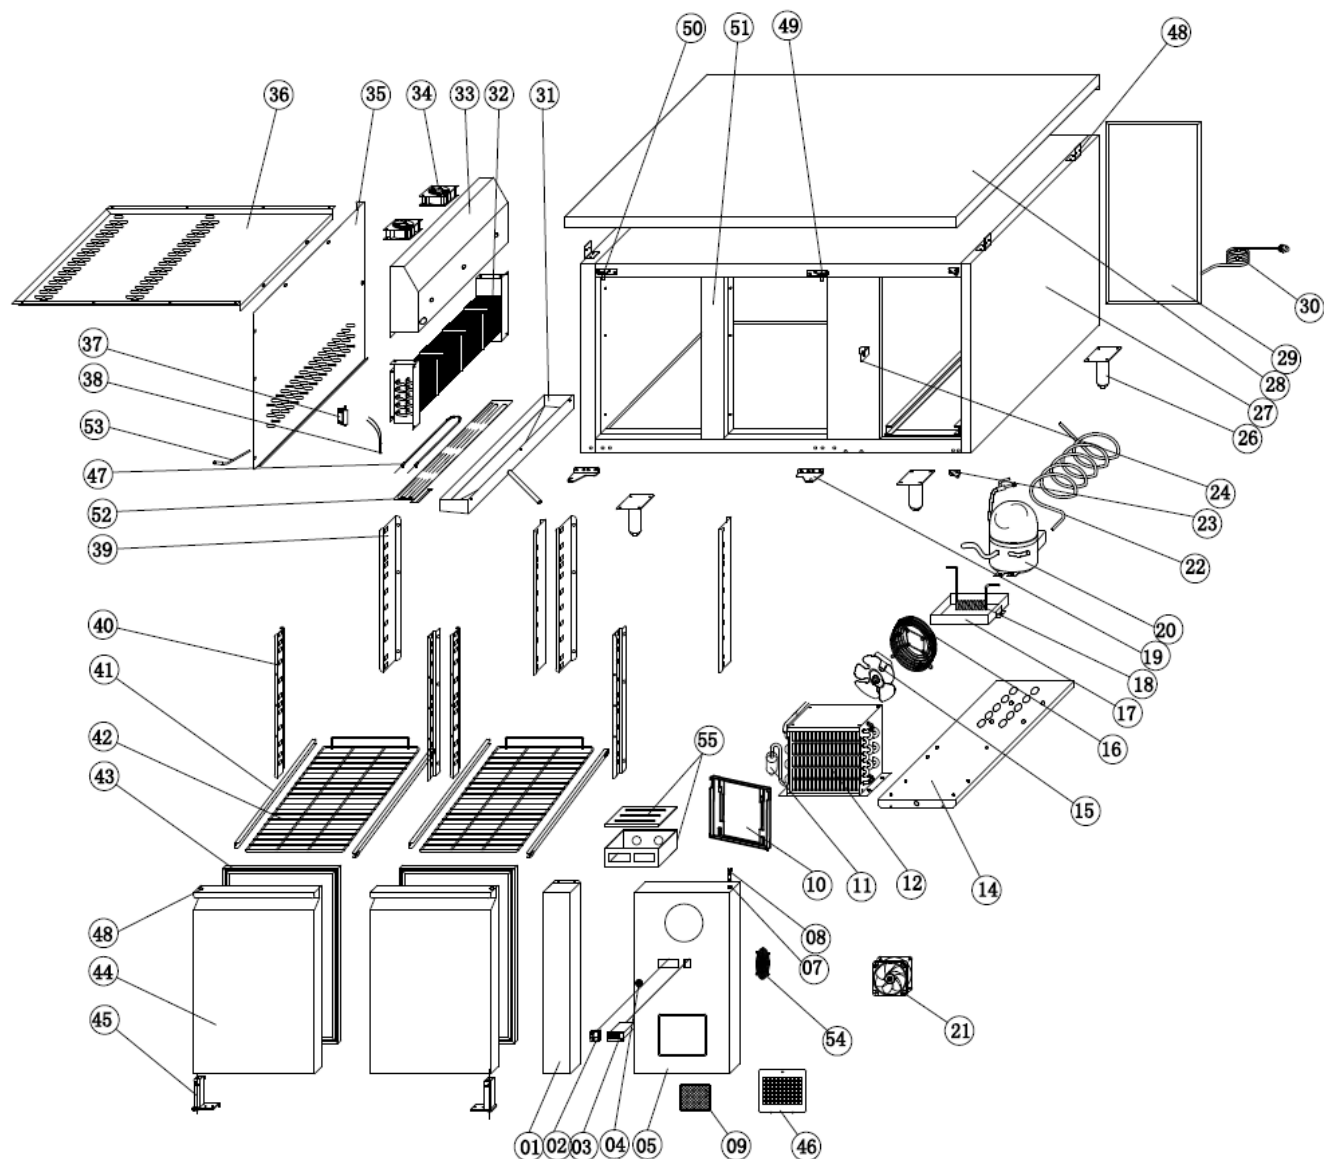


EXPLODED VIEW – LEGEND: 323-1077 HAJO 2100 BT

1	Fixed front panel	Feste Frontblende
2	Main switch	Hauptschalter
3	Thermostat	Thermostat
4	Lock	Schloss
5	Front panel	Bedienblende
7	Bushing	Buchse
8	Nut	Mutter
9	Filter	Luftfilter
10	Condenser fan support	Kondensatorlüfter-Halterung
11	Filter drier	Filtertrockner
12	Condenser	Verflüssiger (Kondensator)
14	Unit board	Montageplatte
15	Condenser fan	Kondensatorlüfter
16	Basket guard grills	Schutzgitter für Kondensatorlüfter
17	Water box	Verdunsterschale
18	Evaporate pipe	Heißgasrohr
19	Door hinge left	Türscharnier links
	Door hinge right	Türscharnier rechts
20	Compressor	Kompressor
21	Circle fan	Geräteraumlüfter
22	Suction pipe	Saugrohr
23	Front panel down hinge	Unteres Bedienblenden-Scharnier
	Front panel up hinge	Oberes Bedienblenden-Scharnier
24	Lock hook	Schlosshaken
26	Feet	Füße
27	Body	Gehäuse / Korpus
28	Top	Deckel / Oberteil
29	Unit room cover	Geräteraumrückwand
30	Plug	Zuleitung
31	Evaporator water pan	Verdampfer-Tauwasserwanne
32	Evaporator	Verdampfer
33	Fan support	Lüfterhalterung
34	Circuit fan	Verdampferlüfter
35	Evaporator cover	Verdampferabdeckung
36	Air flow conduct board	Luftleitplatte
37	Sensor fixed box	Sensorbefestigungsbox
38	Protector for heating element	Schutz für Heizelement
39	Back support left	Hinterer Träger links
	Back support right	Hinterer Träger rechts
40	Front support left	Vorderer Träger links
	Front support right	Vorderer Träger rechts
41	Guide left/right	Laufleiste rechts
	Guide left/right	Laufleiste links
42	Shelf	Rost
43	Gasket	Dichtung
44	Door left	Tür links

	Door right	Tür rechts
45	Door spring hinge	Türfeder-Scharnier
46	Air flow window	Lüftungsklappe
47	Defrost heating element	Abtauheizelement
48	Top fixed board	Befestigung für Deckel / Oberteil
49	Door up hinge right	Oberes Türscharnier rechts
50	Door up hinge left	Oberes Türscharnier links
51	Middle bridge	Mittlere Brücke
	Middle bridge heater	Heizung mittlere Brücke
52	Water pan heater	Wasserwannenheizung
53	Sensor	Sensor
54	Basket guard grills	Schutzgitter für Geräteraumlüfter
55	Junction box	Schaltkasten
	Junction box cover	Abdeckung Schaltkasten

EXPLODED VIEW: 323-1078 HAJO 3100 BT

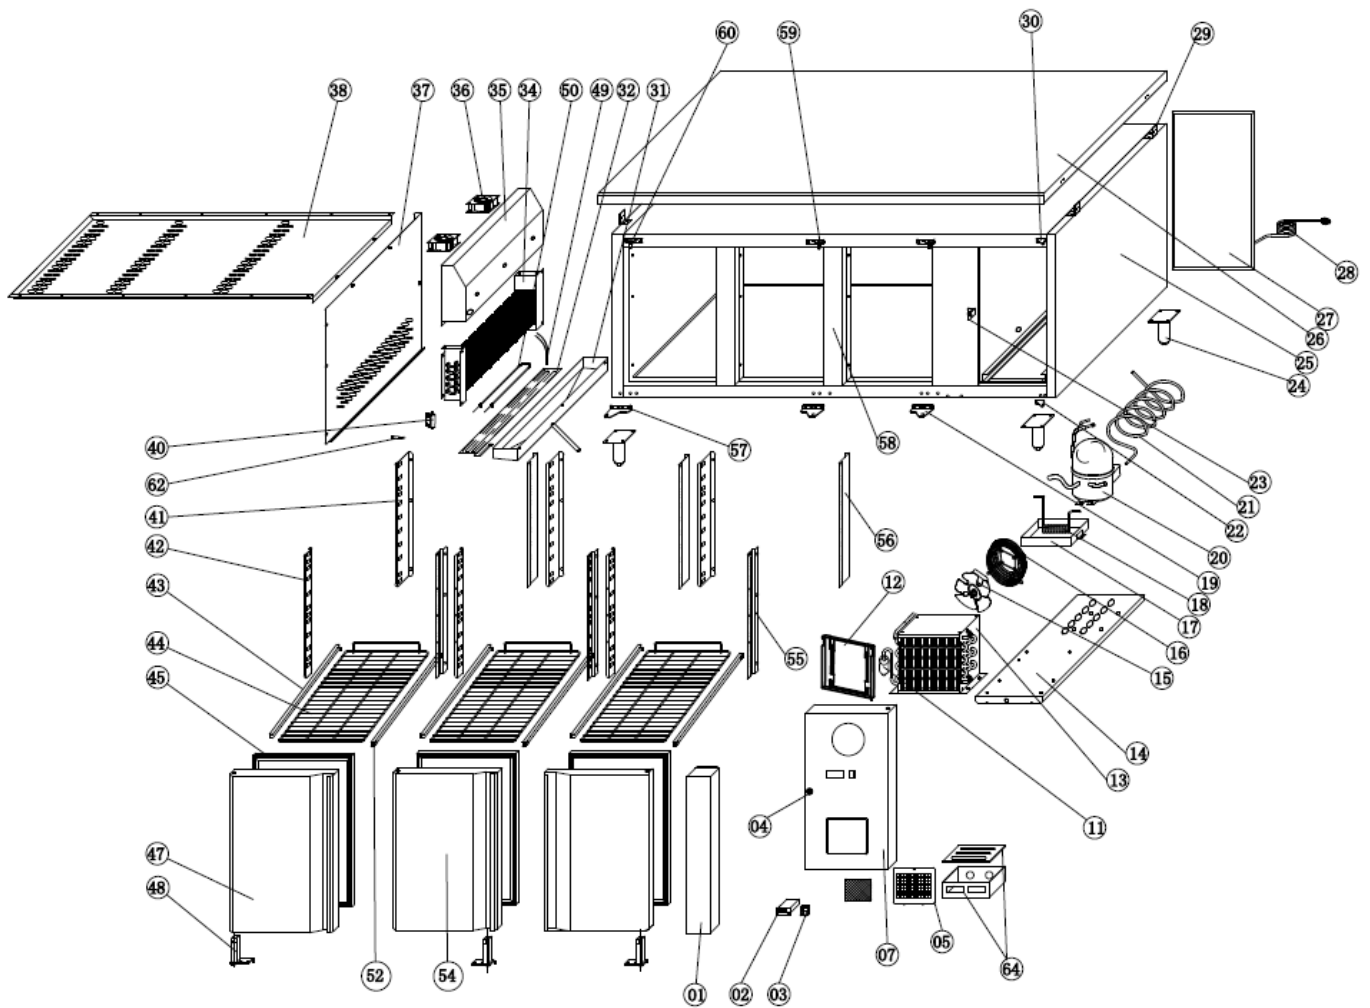


EXPLODED VIEW – LEGEND: 323-1078 HAJO 3100 BT

1	Fixed front panel	Feste Frontblende
2	Thermostat	Thermostat
3	Main switch	Hauptschalter
4	Lock	Schloss
5	Air flow window	Lüftungsklappe
7	Front panel down	Bedienblende
11	Filter drier	Filtertrockner
12	Condenser fan support	Kondensatorlüfter-Halterung
13	Condenser	Verflüssiger (Kondensator)
14	Unit board	Montageplatte
15	Condenser fan	Kondensatorlüfter
	Fan blade	Lüfterflügel
16	Basket guard grills	Schutzgitter für Lüfter
17	Water box	Verdunsterschale
18	Evaporate pipe	Heißgasrohr
19	Door down hinge right	Unteres Türscharnier rechts
20	Compressor	Kompressor
21	Suction pipe	Saugrohr
22	Front panel down hinge	Unteres Bedienblenden-Scharnier
23	Lock hook	Schlosshaken
24	Feet	Füße
25	Body	Gehäuse / Korpus
26	Top	Deckel / Oberteil
27	Unit room cover	Geräteraumrückwand
28	Plug	Zuleitung
29	Top fixed board	Befestigung für Deckel/Oberteil
30	Front panel up hinge	Oberes Bedienblenden-Scharnier
31	Evaporator water pan	Verdampfer-Tauwasserwanne
32	Water pan heater	Wasserwannenheizung
34	Evaporator	Verdampfer
35	Fan support	Lüfterhalterung
36	Evaporator fan	Verdampferlüfter
37	Evaporator cover	Verdampferabdeckung
38	Air flow conduct board	Luftleitplatte
40	Sensor fixed box	Sensorbefestigungsbox
41	Back support left	Hinterer Träger links
42	Front support left	Vorderer Träger links
43	Guide left	Laufleiste links
44	Shelf	Rost
45	Gasket	Dichtung
47	Left door	Tür links
48	Door spring	Türfeder
49	Protector for heating element	Schutz für Heizelement
50	Defrost heating element	Abtauheizelement
52	Guide right	Laufleiste rechts
54	Right door	Tür rechts

55	Front support right	Vorderer Träger rechts
56	Back support right	Hinterer Träger rechts
57	Door down hinge left	Unteres Türscharnier links
58	Middle bridge	Mittlere Brücke
	Middle bridge heater	Heizung mittlere Brücke
59	Door up hinge right	Oberes Türscharnier rechts
60	Door up hinge left	Oberes Türscharnier links
62	Sensor	Sensor
64	Junction box	Schaltkasten
	Junction box cover	Abdeckung Schaltkasten

EXPLODED VIEW: 323-1079 HAJO 4100 BT

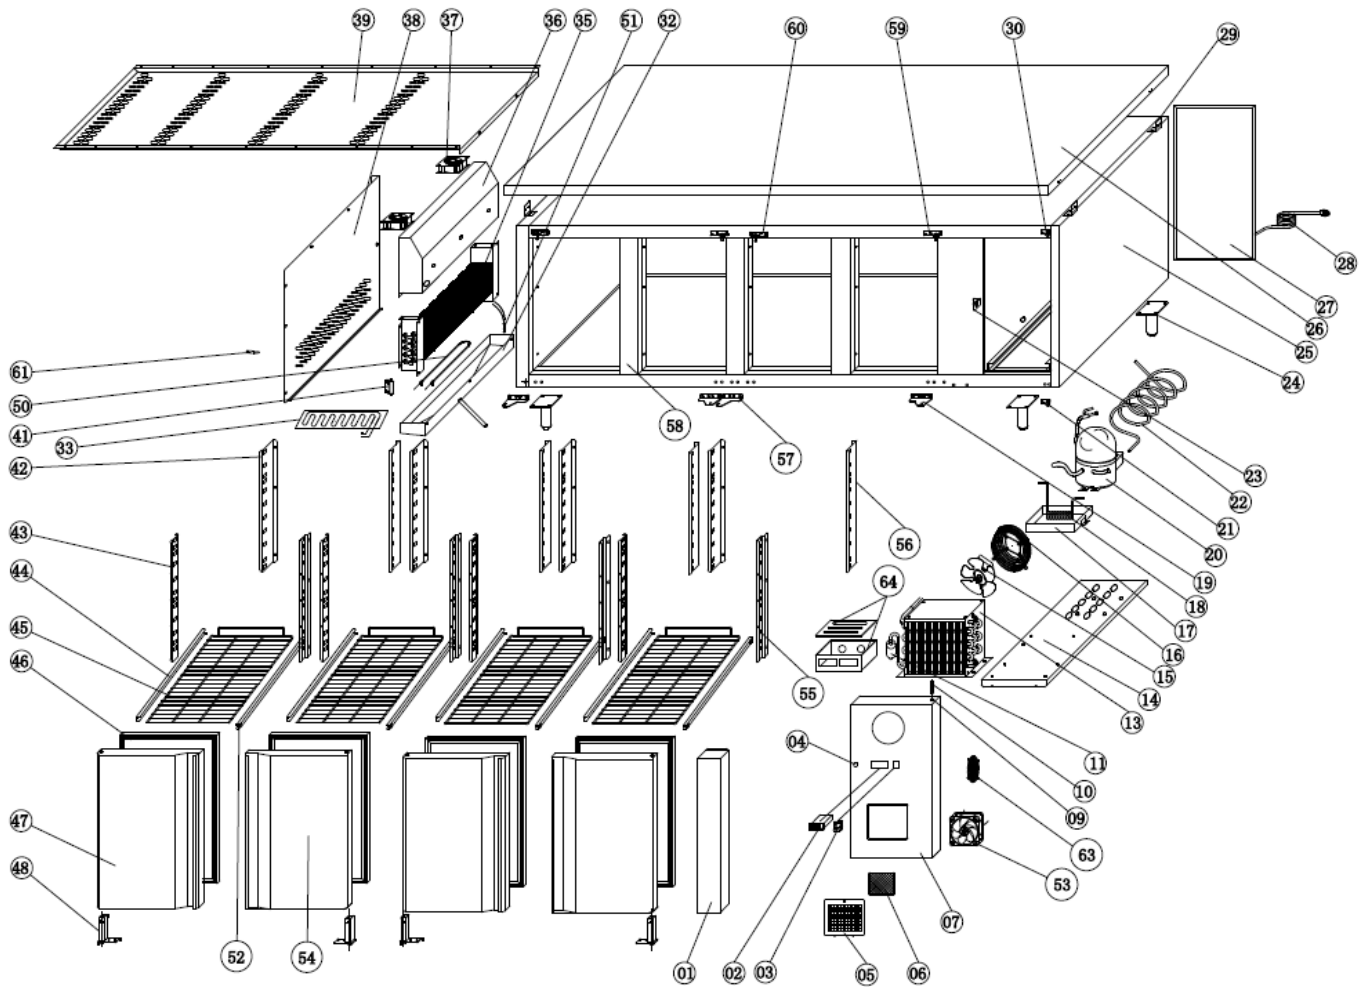

EXPLODED VIEW – LEGEND: 323-1079 HAJO 4100 BT

1	Fixed front panel	Feste Frontblende
2	Thermostat	Thermostat
3	Main switch	Hauptschalter
4	Lock	Schloss
5	Air flow window	Luftstromfenster
6	Filter	Filter
7	Front panel	Frontblende
9	Bushing	Buchse
10	Nut	Mutter
11	Filter drier	Filtertrockner
13	Condenser	Verflüssiger (Kondensator)
14	Unit board	Steuerplatine / Geräteeinheit
15	Condenser fan	Kondensatorlüfter
	Fan blade	Lüfterflügel
16	Basket guard grills	Schutzgitter für Körbe
17	Water box	Wasserbox
18	Evaporate pipe	Verdampfungsrohr
19	Door down hinge right	Unteres Türscharnier rechts
20	Compressor	Kompressor
21	Front panel down hinge	Unteres Frontblenden-Scharnier
22	Suction pipe	Saugrohr
23	Lock hook	Schlosshaken
24	Feet	Füße
25	Body	Gehäuse / Korpus
26	Top	Deckel / Oberteil
27	Unit room cover	Abdeckung Geräteraum
28	Plug	Stecker
29	Top fixed board	Obere Befestigungsplatte
30	Front panel up hinge	Oberes Frontblenden-Scharnier
32	Evaporator water pan	Verdampfer-Wasserwanne
33	Water pan heater	Wasserwannenheizung
35	Evaporator	Verdampfer
36	Fan support	Lüfterhalterung
37	Evaporator fan	Verdampferlüfter
38	Evaporator cover	Verdampferabdeckung
39	Air flow conduct board	Luftleitplatte
41	Sensor fixed box	Sensorbefestigungsbox
42	Back support left	Rückenträger links
43	Front support left	Vorderstütze links
44	Guide left	Führung links
45	Shelf	Fachboden / Regal
46	Gasket	Dichtung
47	Door	Tür
48	Door spring	Türfeder
50	Defrost heating element	Abtauheizelement
51	Protector for heating element	Schutz für Heizelement

52	Guide right	Führung rechts
53	Circle fan	Rundlüfter
54	Door	Tür
55	Front support right	Vorderstütze rechts
56	Back support right	Rückenträger rechts
57	Down hinge left	Unteres Scharnier links
58	Middle bridge	Mittlere Brücke
	Middle bridge heater	Heizung mittlere Brücke
59	Door up hinge right	Oberes Türscharnier rechts
60	Door up hinge left	Oberes Türscharnier links
61	Sensor	Sensor
63	Basket guard grills	Schutzgitter für Körbe
64	Junction box	Anschlusskasten
	Junction box cover	Abdeckung Anschlusskasten

PACKAGING DISPOSAL



Please separate the packaging materials accordingly and take them to the appropriate collection points for recycling and environmental protection.

DEVICE DISPOSAL



Once the appliance has reached the end of its life, please dispose of it properly at a designated collection point for electrical devices.

Electrical appliances do not belong in household waste.

Your local authority can provide information on the locations and opening hours of disposal sites.

This is the only way to ensure that old appliances are disposed of and recycled correctly.

Thank you!

Made in P.R.C for:

SARO Gastro-Products GmbH
Sandbahn 6, 46446 Emmerich am Rhein, Germany
Tel. +49 (0) 2822 9258-0
Fax +49 (0) 2822 18192
E-Mail info@saro.de
Web www.saro.de